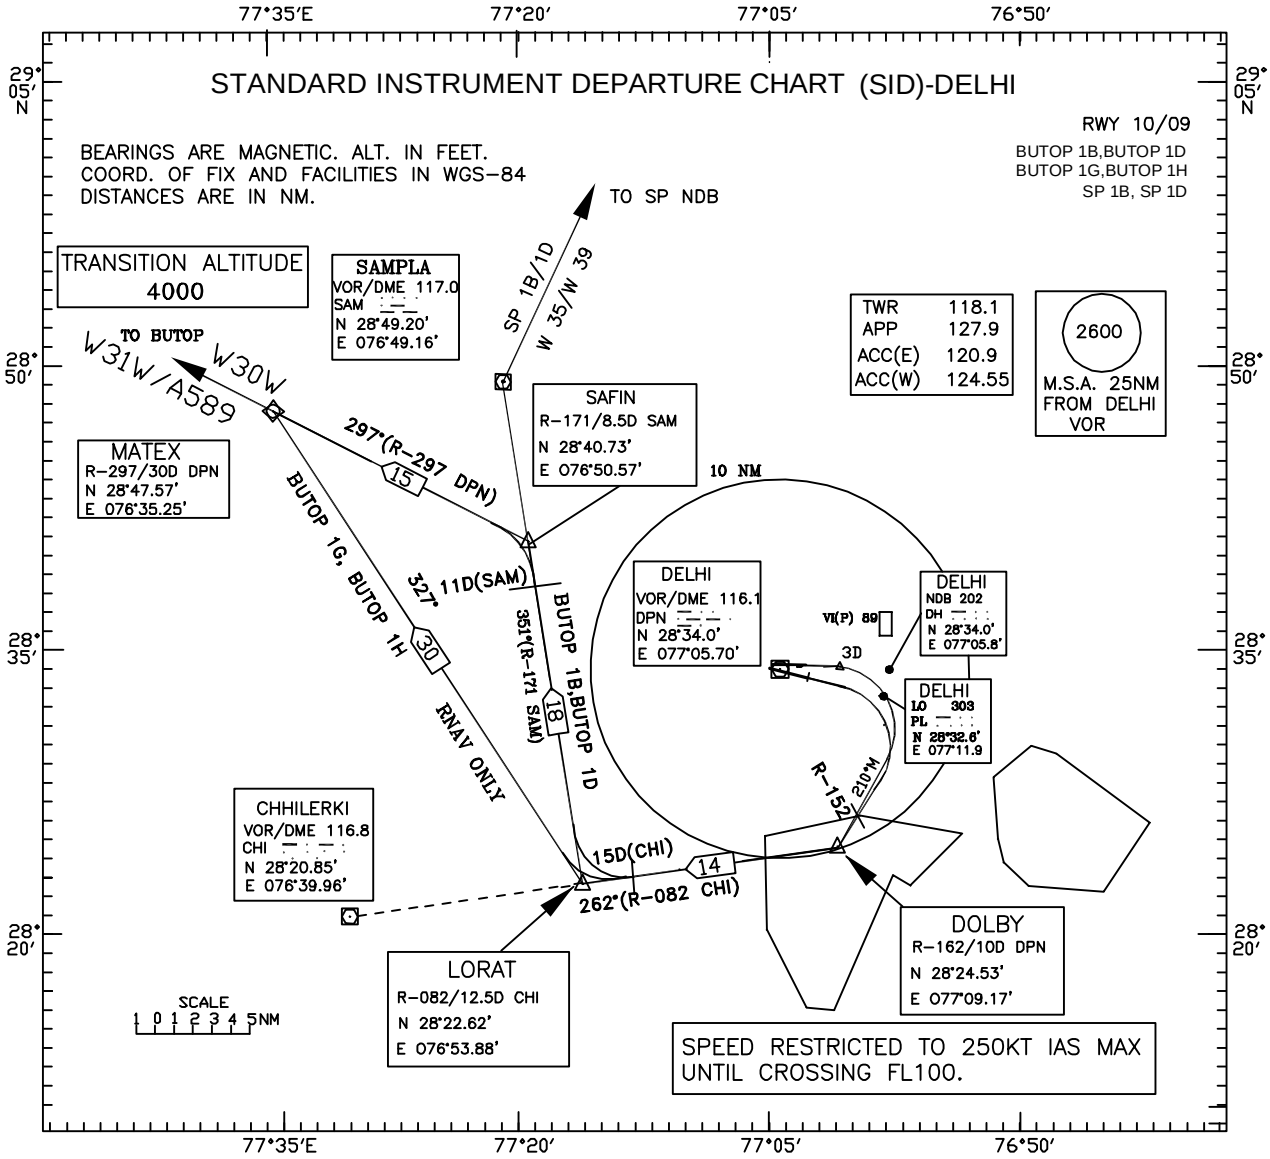

FOR ALL SIDs AFTER DEPARTURE CLIMB INITIALLY TO FL55 OR AS CLEARED BY ATC.
MINIMUM CLIMB GRADIENT 4% (243FT/NM) UNTIL REACHING FL55.

BUTOP 1B : RWY 10

Turn right before LO(303 PL). Track 210°M to DOLBY. Crossing R-152 (DPN) turn right to establish R-082 (CHI) to LORAT. Crossing 15D(CHI) turn right to establish R-171 (SAM) to SAFIN. Crossing 11D (SAM) turn left to establish R-297 (DPN) to BUTOP.

BUTOP 1D : RWY 09

Climb straight ahead until 3D (DPN). Turn right track 210°M to DOLBY. Crossing R-152 (DPN) turn right to establish R-082 (CHI) to LORAT. Crossing 15D(CHI) turn right to establish R-171 (SAM) to SAFIN. Crossing 11D (SAM) turn left to establish R-297 (DPN) to BUTOP.

BUTOP 1G: RWY 10 (RNAV ONLY)

Turn right before LO(303 PL). Track 210°M to DOLBY. Crossing R-152 (DPN) turn right to establish R-082 (CHI) to LORAT. Crossing 15D(CHI) turn right, track 327°M to MATEX. Then establish R-297 (DPN) to BUTOP.

BUTOP 1H : RWY 09 (RNAV ONLY)

Climb straight ahead until 3D(DPN). Turn right track 210°M to DOLBY. Crossing R-152 (DPN) turn right to establish R-082 (CHI) to LORAT. Crossing 15D(CHI) turn right, track 327°M to MATEX. Then establish R-297 (DPN) to BUTOP.

SP 1B : RWY 10

Turn right before LO(303 PL). Track 210°M to DOLBY. Crossing R-152 (DPN) turn right to establish R-082 (CHI) to LORAT. Crossing 15D(CHI) turn right to establish R-171 (SAM) to SAMPLA VOR DME (117.0 SAM). Then establish R-025(SAM) to SARSAWA NDB(298 SP)

SP 1D : RWY 09

Climb straight ahead until 3D (DPN). Turn right track 210°M to DOLBY. Crossing R-152 (DPN) turn right to establish R-082 (CHI) to LORAT. Crossing 15D(CHI) turn right to establish R-171 (SAM) to SAMPLA VOR DME (117.0 SAM). Then establish R-025 (SAM) to SARSAWA NDB (298 SP).